



Mobile TD/TTC/LTE

PC Tools for TD/TTC/LTE

CPFilterOnAP UserGuide

V1.0

Document Conventions

	Note: Provides related information or information of special importance.
 Caution	Caution: Indicates potential damage to hardware or software, or loss of data.
	Warning: Indicates a risk of personal injury.

Document Status

Doc Status: UE ConSole User Guide	Technical Publication:
-----------------------------------	------------------------

For more information, visit our website at: www.asrmicro.com

Disclaimer

No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose, without the express written permission of Asrmicro. ASR retains the right to make changes to this document at any time, without notice. ASR makes no warranty of any kind, expressed or implied, with regard to any information contained in this document, including, but not limited to, the implied warranties of merchantability or fitness for any particular purpose. Further, ASR does not warrant the accuracy or completeness of the information, text, graphics, or other items contained within this document.

ASR products are not designed for use in life-support equipment or applications that would cause a life-threatening situation if any such products failed. Do not use ASR products in these types of equipment or applications.

Copyright © 2020. ASR International Ltd. All rights reserved..

Table of Contents

1	PERFACE.....	4
1.1	CPFILTERONAP FUNCTION.....	4
2	USAGE.....	5
2.1	START CPDIAGFILTERONAP.....	5
2.2	ADD FILTER.....	5
2.3	GET FILTER.....	6
2.4	DELETE FILTER.....	6
3	APPENDIX.....	7
3.1	REPORT ISSUES.....	7
3.2	UPDATE THIS DOCUMENT.....	7
3.3	REVISION HISTORY.....	7

1 Perface

1.1 CPFilterOnAP Function

Filter CP log base on AP,Multi-CPFilter is saved to UE file system, it distinguish the CPFilter by file name.


CPFilterOnAP support “Add Filter/Get Filter/Delete Filter” .

2 Usage

2.1 Start CPDiagFilterOnAP


Start CPDiagFilterOnAP, you can perform the following steps:

- 1、 Select Modules-> UEFilter from the top menu bar to activate UEFilter.exe
- 2、 Click “CP Diag Filter ON AP”, please see the following picture:

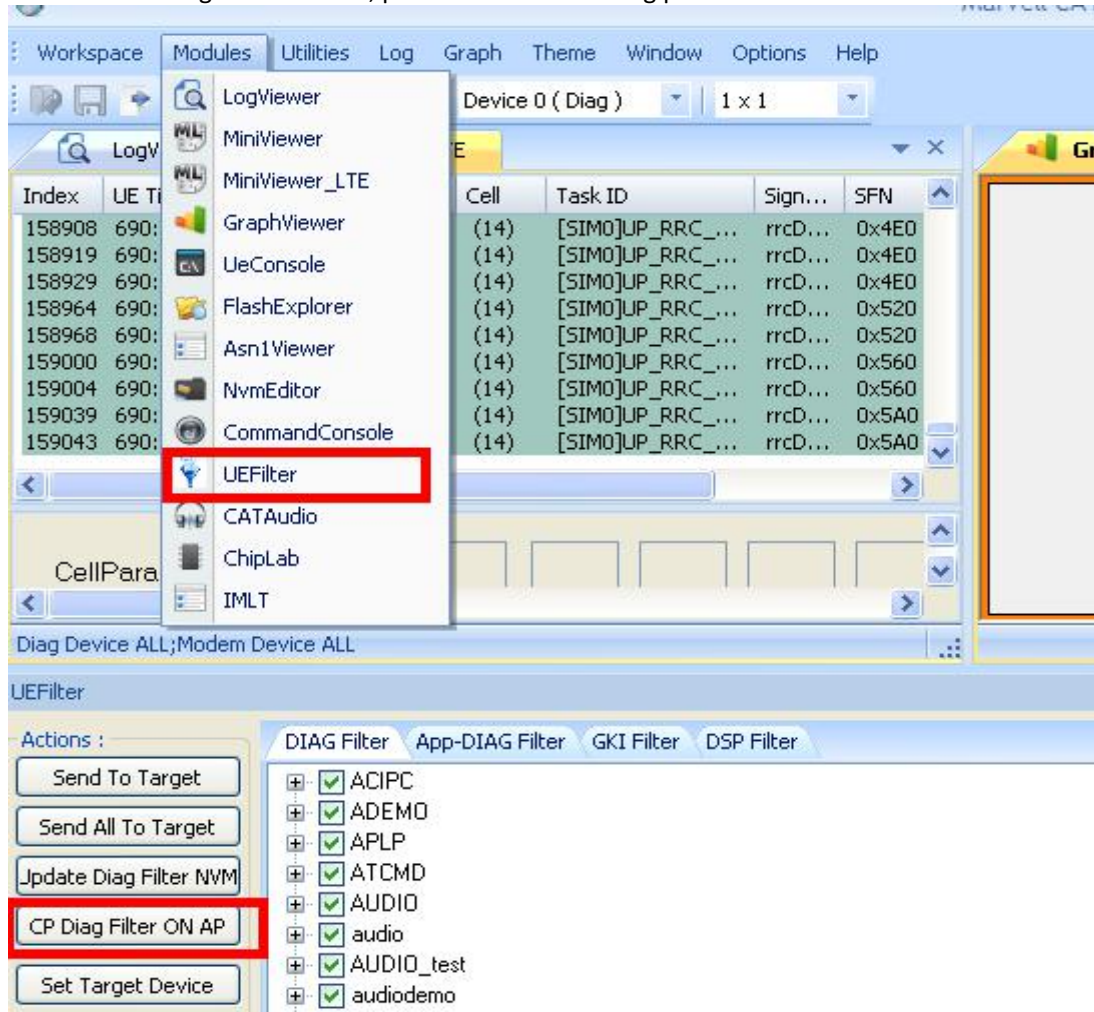


2.2 Add Filter

Add filter to UE, please see the following picture:

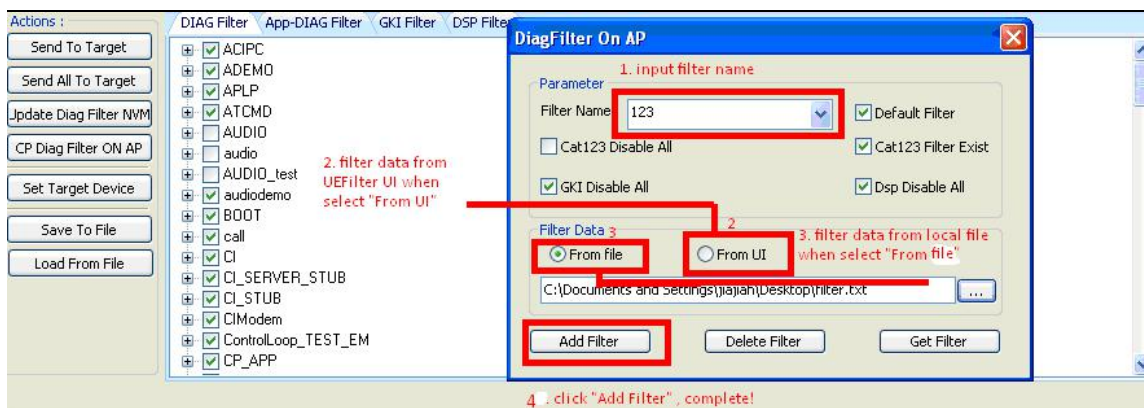

2.3 Get Filter

Get Filter file from UE, please see the following picture:

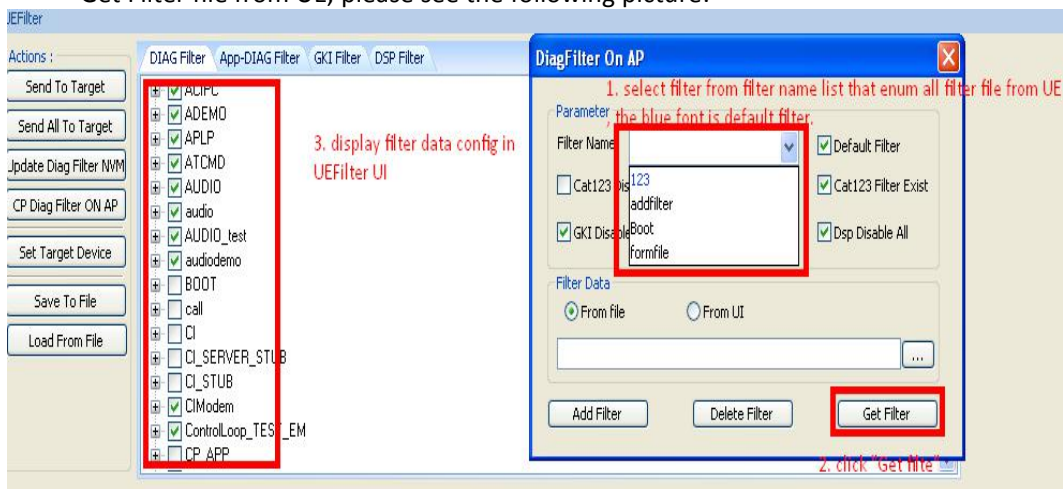

2.4 Delete Filter

Delete Filter file from UE, please see the following picture:



3 Appendix

3.1 Report issues

Please visit webs: <http://support.asrmicro.com>.

Or contact ASR FAE/AE

Or please send email to lianghuxu@asrmicro.com with "PC Tools User Doc Issue/Update: ..." title

Or submit an issue at CQ web: <http://sh2-cq01.asrmicro.com/cqweb/login>.

3.2 Update this document

Please send updated document to lianghuxu@asrmicro.com with "PC Tools User Doc Issue/Update: ..." title for merging, and you will receive merged latest version.

3.3 Revision History

Rev	Description	Date
1.00	Initial version	2012-04-11
1.01	Commit to SVN.	2012-04-19