



Mobile TD/TTC/LTE

PC Tools for TD/TTC/LTE

LogFile UserGuide

V1.0

Document Conventions



Note: Provides related information or information of special importance.



Caution

Caution: Indicates potential damage to hardware or software, or loss of data.



Warning: Indicates a risk of personal injury.

Document Status

Doc Status: UE ConSole User Guide

Technical Publication:

For more information, visit our website at: www.asrmicro.com

Disclaimer

No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose, without the express written permission of Asrmicro. ASR retains the right to make changes to this document at any time, without notice. ASR makes no warranty of any kind, expressed or implied, with regard to any information contained in this document, including, but not limited to, the implied warranties of merchantability or fitness for any particular purpose. Further, ASR does not warrant the accuracy or completeness of the information, text, graphics, or other items contained within this document.

ASR products are not designed for use in life-support equipment or applications that would cause a life-threatening situation if any such products failed. Do not use ASR products in these types of equipment or applications.

Copyright © 2020. ASR International Ltd. All rights reserved..

Table of Contents

1	前言.....	4
2	使用用法.....	5
2.1	ONLINE LOGSETTING.....	5
2.1.1	配置 ICL File 大小.....	5
2.1.2	配置 ICL File 保存路径.....	6
2.2	OFFLINE LOGSETTING.....	6
2.2.1	Log 播放范围选择.....	6
3	APPENDIX.....	8
3.1	REPORT ISSUES.....	8
3.2	UPDATE THIS DOCUMENT.....	8
3.3	REVISION HISTORY.....	8

1 前言

Catstudio LogFile 模块主要包含 Log 相关配置，它又分为：Online LogSetting 和 Offline LogSetting.

- 1) Online LogSetting: 用户可自定义 log 文件大小、自定义 log 文件名、自定义 iclog 文件保存路径。
- 2) Offline LogSetting: 用户可自定义 log 播放范围。

2

使用用法

2.1 Online LogSetting


2.1.1 配置 ICL File 大小

- 1、启动 Catstudio , 选择 online 模式;
- 2、在 Catstudio 菜单选择 Option->Logger Options,将启动 Logger Setting 对话框, 如下图所示:



2.1.2 配置 ICL File 保存路径

- 1、启动 Catstudio , 选择 online 模式;
- 2、在 Catstudio 菜单选择 Option->Logger Options,将启动 Logger Setting 对话框, 如下图所示:

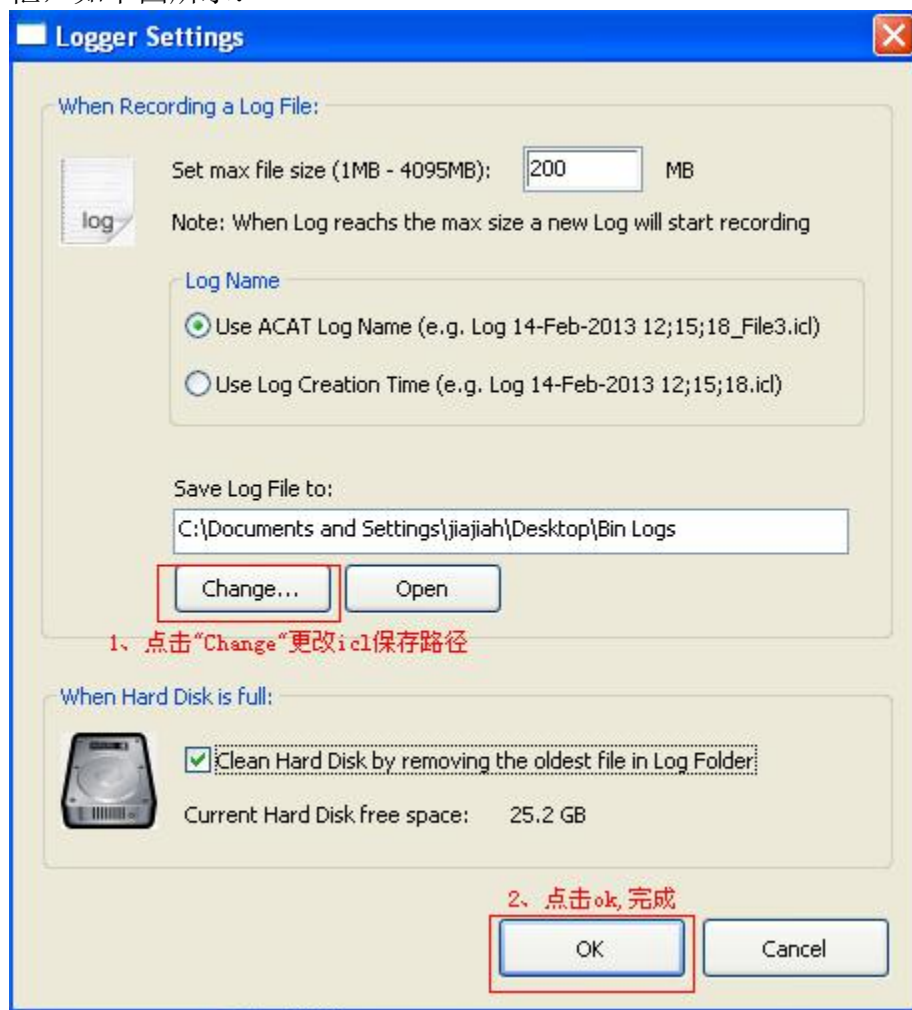


2.2 Offline LogSetting


2.2.1 Log 播放范围选择

CATStudio 支持大 Log 播放范围选择, 操作方法如下:

1、首先需要设置 Log File 大小,当导入的文件大于设定的值, 在导入 log 时将会弹出对话框让其选择播放范围。

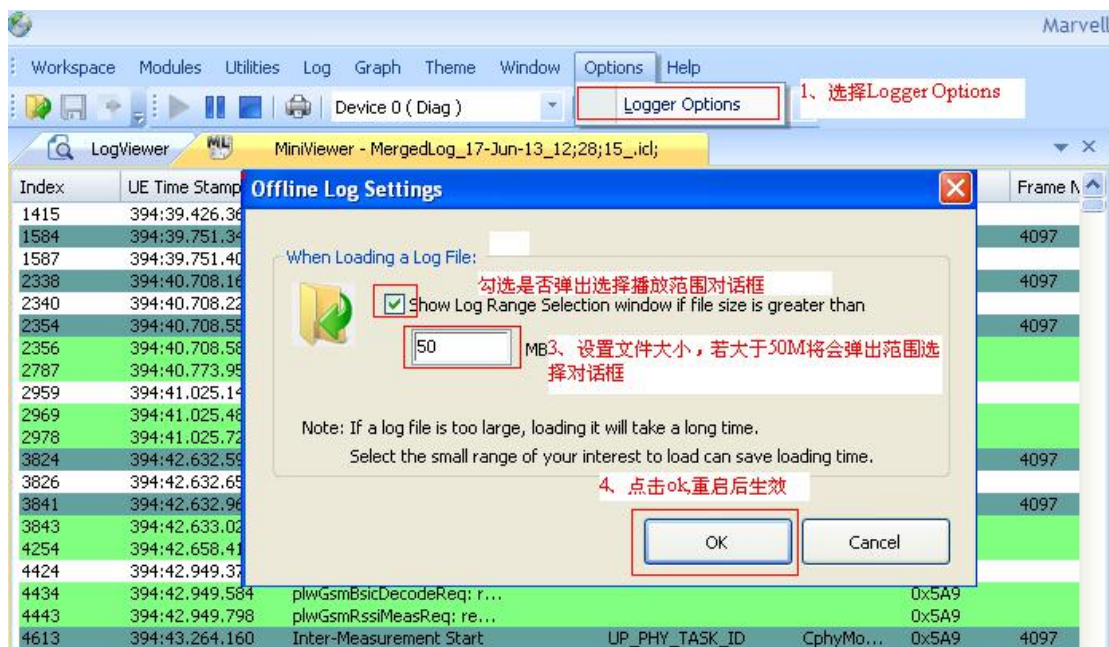

2、设置成功后, 再启动 Catstudio, 导入大于设定值的 log, 将弹出的播放范围对话框如下图所示:

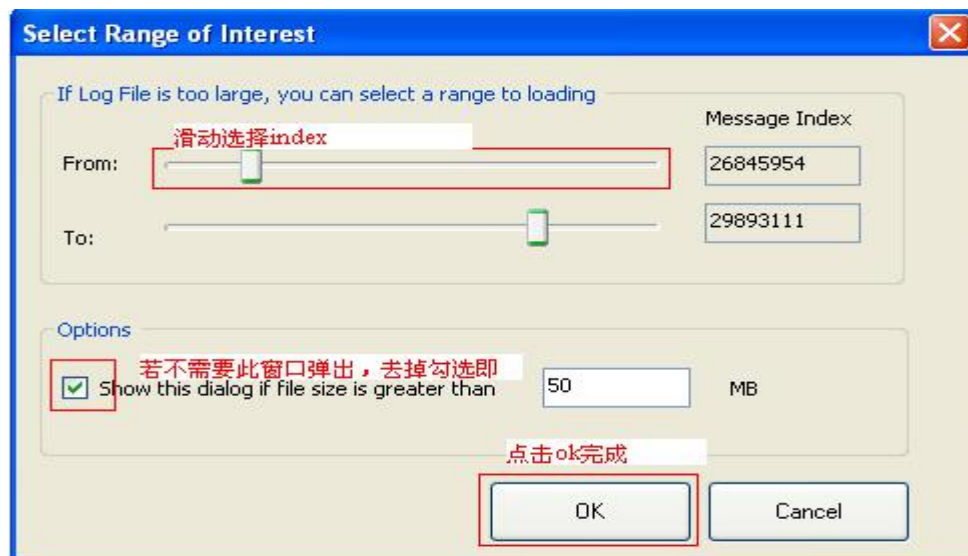

3 Appendix

3.1 Report issues

Please visit webs: <http://support.asrmicro.com>.

Or contact ASR FAE/AE

Or please send email to lianghuxu@asrmicro.com with "PC Tools User Doc Issue/Update: ..." title

Or submit an issue at CQ web: <http://sh2-cq01.asrmicro.com/cqweb/login>.

3.2 Update this document

Please send updated document to lianghuxu@asrmicro.com with "PC Tools User Doc Issue/Update: ..." title for merging, and you will receive merged latest version.

3.3 Revision History

Rev	Description	Date
1.00	Initial version	2013-8-28