



Mobile TD/TTC/LTE

PC Tools for TD/TTC/LTE

UpdateDB UserGuide

V1.0

Document Conventions

	Note: Provides related information or information of special importance.
 Caution	Caution: Indicates potential damage to hardware or software, or loss of data.
	Warning: Indicates a risk of personal injury.

Document Status

Doc Status: UE ConSole User Guide	Technical Publication:
-----------------------------------	------------------------

For more information, visit our website at: www.asrmicro.com

Disclaimer

No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose, without the express written permission of Asrmicro. ASR retains the right to make changes to this document at any time, without notice. ASR makes no warranty of any kind, expressed or implied, with regard to any information contained in this document, including, but not limited to, the implied warranties of merchantability or fitness for any particular purpose. Further, ASR does not warrant the accuracy or completeness of the information, text, graphics, or other items contained within this document.

ASR products are not designed for use in life-support equipment or applications that would cause a life-threatening situation if any such products failed. Do not use ASR products in these types of equipment or applications.

Copyright © 2020. ASR International Ltd. All rights reserved..

目录

1	前言.....	4
2	更新 DB 的方法.....	4
2.1	手动更新 DB.....	4
2.1.1	用 MDB 文件更新 DB.....	4
2.1.2	用 txt 文件更新 DB.....	6
2.2	自动更新 DB.....	6
3	APPENDIX.....	6
3.1	REPORT ISSUES.....	6
3.2	UPDATE THIS DOCUMENT.....	7
3.3	REVISION HISTORY.....	7

1 前言

1.1 DB 的状态介绍

运行 CatStudio.exe，在右侧 Logger 的 panel 下可以看到如下图所示



 
绿色代表已激活的 Device 设备 DB 是匹配的。



红色代表已激活的 Device 设备 DB 是不匹配的。



灰色代表此 Device 设备未激活。



“Show Alive Device only”的作用是：
勾选上 Database 的列表中将只出现已激活的 Device 设备。
没有勾选上的话显示全部 Device 设备。

2 更新 DB 的方法

2.1 手动更新 DB

2.1.1 用 MDB 文件更新 DB

Step1: 如图 1 所示，点击 DB 不匹配的 Device 内的 Update 按钮。

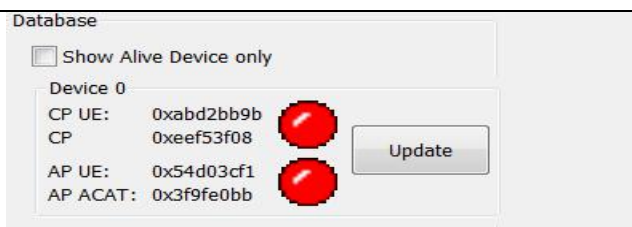


图 1

Step2: 如图 2 所示，分别加载相应的 ap 和 cp 部分的 mdb 文件，点击 **Update** 更新全部文件。

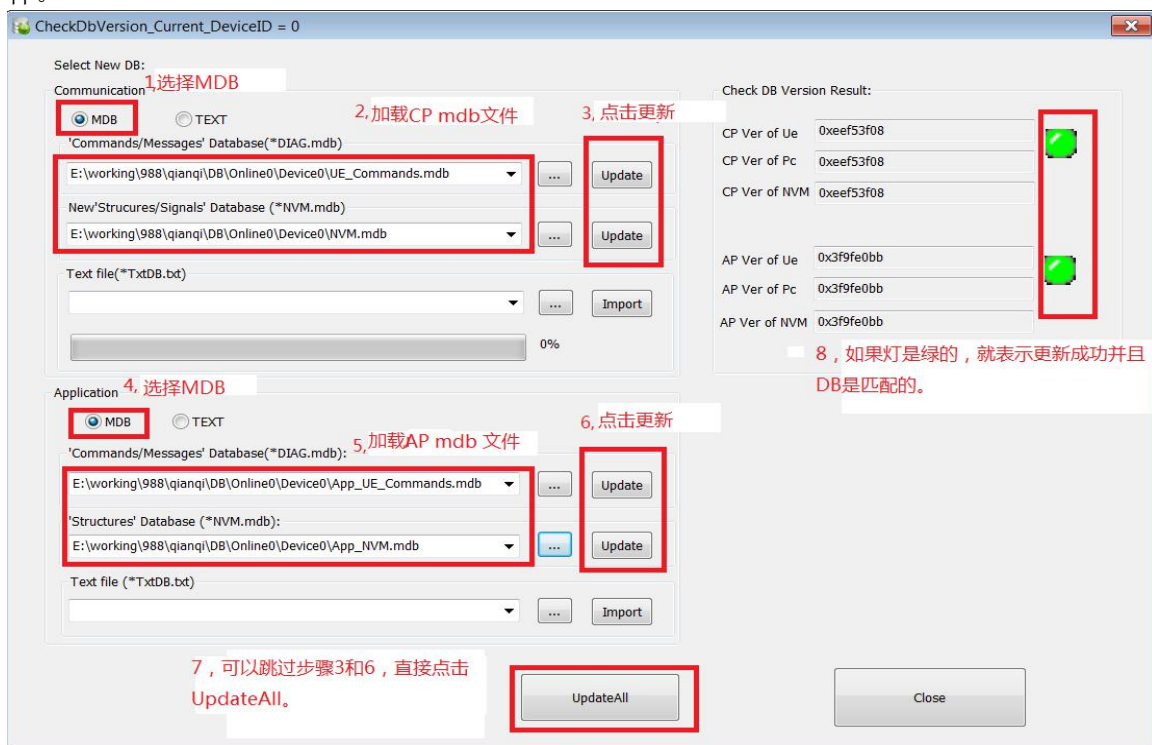


图 2

Step3: 如图 3 所示，DB 更新成功。



图 3

2.1.2 用 txt 文件更新 DB

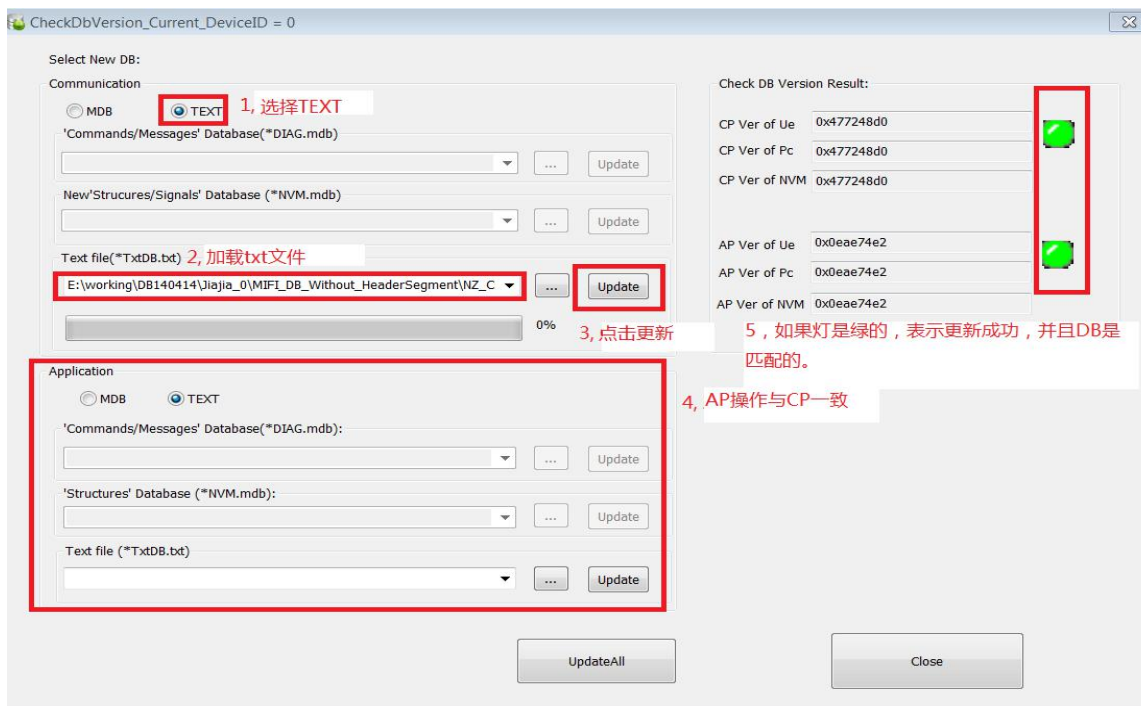


图 4

2.2 自动更新 DB

自动更新 DB 的前提条件是：所烧的 image 里包含 cp_mdb.zip 和 ap_mdb.zip 文件，并且文件是 NVM/mbd 路径下的。

满足以上条件才会在 DB 不匹配的时候自动更新 DB。

满足自动匹配的条件，激活 Device 以后，等待 2-3S 将会弹出如图 4 所示的进度条框，进度条完成以后，DB 就自动更新成功了。

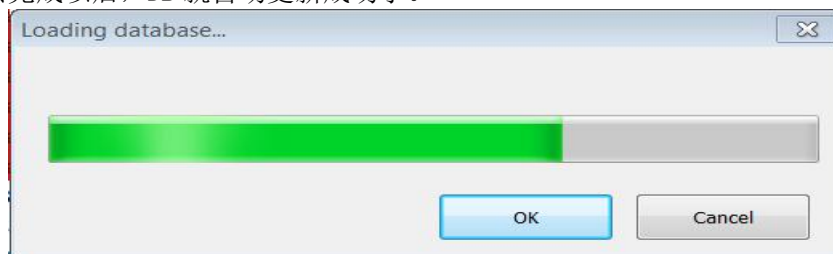


图 5

3 Appendix

3.1 Report issues

Please visit webs: <http://support.asrmicro.com>.

Or contact ASR FAE/AE

Or please send email to lianghuxu@asrmicro.com with "PC Tools User Doc Issue/Update: ..." title

Or submit an issue at CQ web: <http://sh2-cq01.asrmicro.com/cqweb/login>.

3.2 Update this document

Please send updated document to lianghuxu@asrmicro.com with "PC Tools User Doc Issue/Update: ..." title for merging, and you will receive merged latest version.

3.3 Revision History

Rev	Description	Date
1.00	Fan Jiang	2013-8-28