



CATStudio for TTC/TD
Catstudio Update DB UserGuide
v1.0

Document Conventions



Note: Provides related information or information of special importance.



Caution

Caution: Indicates potential damage to hardware or software, or loss of data.



Warning: Indicates a risk of personal injury.

Document Status

Doc Status: Catstudio UpdateDB UserGuide

Technical Publication: v1.0

For more information, visit our website at: www.asrmicro.com

Disclaimer

No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose, without the express written permission of Asrmicro. ASR retains the right to make changes to this document at any time, without notice. ASR makes no warranty of any kind, expressed or implied, with regard to any information contained in this document, including, but not limited to, the implied warranties of merchantability or fitness for any particular purpose. Further, ASR does not warrant the accuracy or completeness of the information, text, graphics, or other items contained within this document.

ASR products are not designed for use in life-support equipment or applications that would cause a life-threatening situation if any such products failed. Do not use ASR products in these types of equipment or applications.

Copyright © 2020. ASR International Ltd. All rights reserved..


Contents

1	Preface.....	4
1.1	Introduction of DB Status.....	4
2	Update DB Method.....	4
2.1	Manual Update DB.....	4
2.1.1	Use MDB file update DB.....	4
2.1.2	Use txt file to update DB.....	6
2.2	Auto Update DB.....	6
3	Appendix.....	6
3.1	Report issues.....	6
3.2	Update this document.....	7
3.3	Revision History.....	7

1 Preface

1.1 Introduction of DB Status

Execute CatStudio.exe, Logger Panel at the right side.

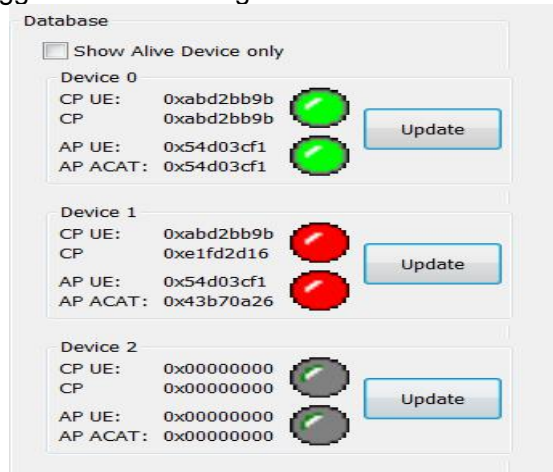


Green led means DB is matching.



Red led means DB is mismatching.



 Grey led means reading UE DB is failed or device is unconnection.

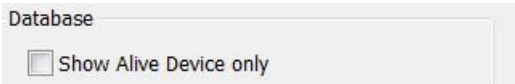

“Show Alive Device only” Function:

Checked: It will only show the activated device equipments in the list.

Unchecked: It will show all device equipments in the list.

2 Update DB Method

2.1 Manual Update DB

2.1.1 Use MDB file update DB

Step1: Click "Update" button.



图 1

Step2: Load corresponding cp.mdb file and ap.mdb file. Click "UpdateAll" button.

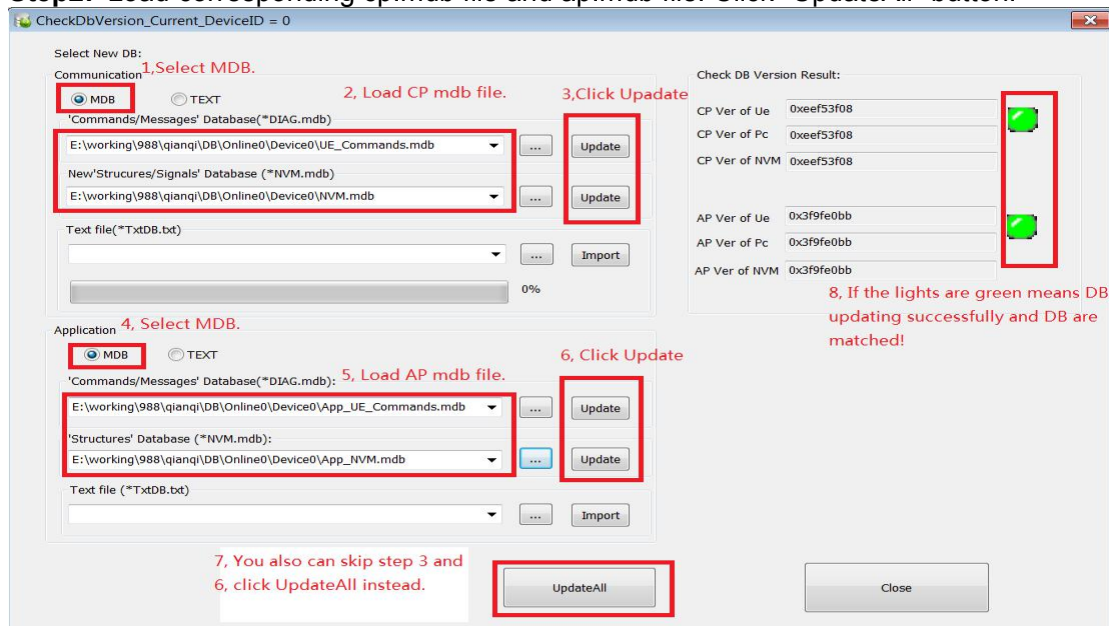


图 2

Step3: DB has been updated successfully as show in the figure 3.



图 3

2.1.2 Use txt file to update DB

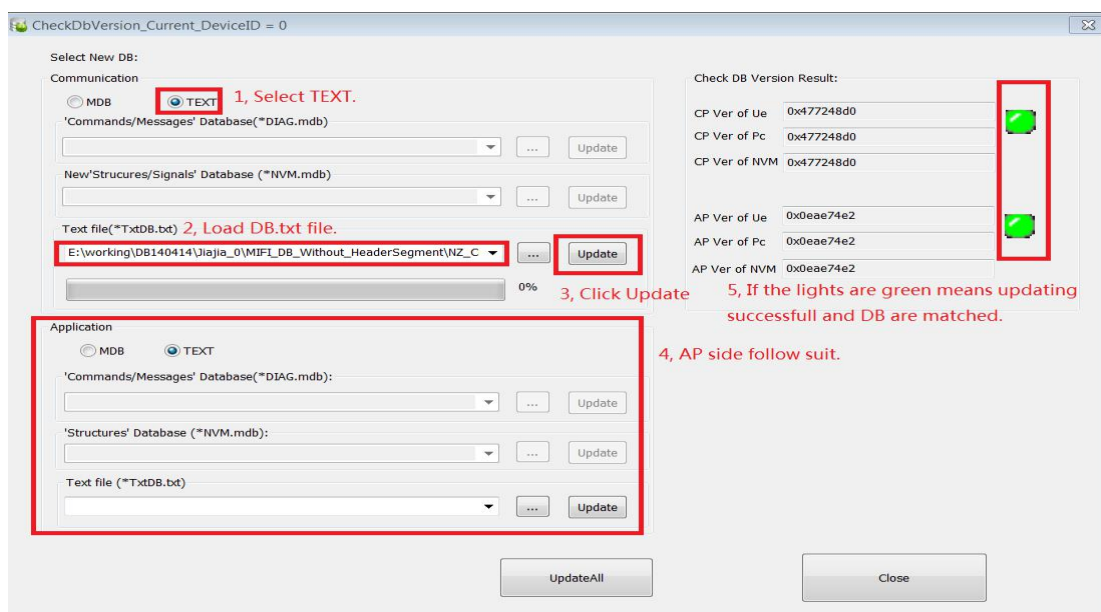


图 4

2.2 Auto Update DB

Prerequisite to automatically update DB: The DKB image includes cp_mdb.zip file and ap_mdb.zip file. And these files are under NVM/mbd directory path.

DB can update automatically when DB is mismatching after meeting the above conditions.

Meeting matching conditions, it will pop up the progress bar as shown as figure 4 after device is activated. When the progress bar is finished, the DB is automatically updated.

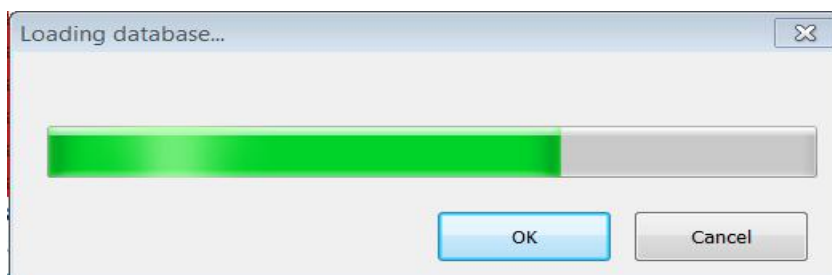


图 6

3 Appendix

3.1 Report issues

Please visit webs: <http://support.asrmicro.com>.

Or contact ASR FAE/AE

Or please send email to lianghuxu@asrmicro.com with "PC Tools User Doc Issue/Update: ..." title

Or submit an issue at CQ web: <http://sh2-cq01.asrmicro.com/cqweb/login>.

3.2 Update this document

Please send updated document to lianghuxu@asrmicro.com with "PC Tools User Doc Issue/Update: ..." title for merging, and you will receive merged latest version.

3.3 Revision History

Rev	Description	Date
1.00	Initial version	2012-04-11
1.01	Commit to SVN.	2012-04-19