



# **Mobile TD/TTC/LTE**

PC Tools for TD/TTC/LTE

## **Dashboard UserGuide**

V1.0

## Document Conventions



**Note:** Provides related information or information of special importance.



**Caution**

**Caution:** Indicates potential damage to hardware or software, or loss of data.



**Warning:** Indicates a risk of personal injury.

## Document Status

Doc Status: UE ConSole User Guide

Technical Publication:

---

For more information, visit our website at: [www.asrmicro.com](http://www.asrmicro.com)

---

### Disclaimer

No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose, without the express written permission of Asrmicro. ASR retains the right to make changes to this document at any time, without notice. ASR makes no warranty of any kind, expressed or implied, with regard to any information contained in this document, including, but not limited to, the implied warranties of merchantability or fitness for any particular purpose. Further, ASR does not warrant the accuracy or completeness of the information, text, graphics, or other items contained within this document.

ASR products are not designed for use in life-support equipment or applications that would cause a life-threatening situation if any such products failed. Do not use ASR products in these types of equipment or applications.

Copyright © 2020. ASR International Ltd. All rights reserved..

## Table of Contents


|     |                           |   |
|-----|---------------------------|---|
| 1   | USAGE.....                | 4 |
| 2   | APPENDIX.....             | 6 |
| 2.1 | REPORT ISSUES.....        | 6 |
| 2.2 | UPDATE THIS DOCUMENT..... | 6 |
| 2.3 | REVISION HISTORY.....     | 6 |

# 1 USAGE

**Step1:**在 Modules 菜单，打开”Graphviewer”。(如果 Graphviewer 窗口已存在，只需激活该窗口)


**Step2:**在 Graph 菜单，打开 Dashboard.

**Step3:**“New”或“Configuration”需要监视的参数:

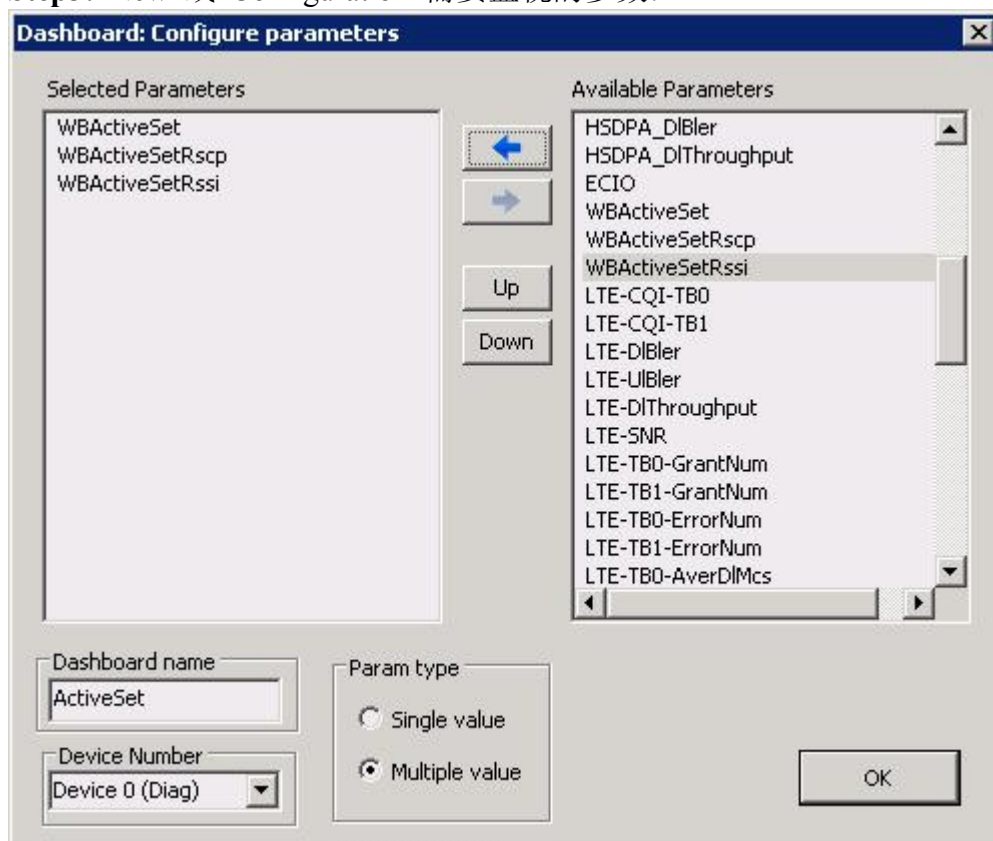

**Step4:**重复 step3，可以添加多个 Dashboard, 比如 RF, RRC, Throughput, 等等。

**Step5:** 在 Catstudio 里面，你可以托拽 Dashboard 到任何位置，比如：[left-bottom](#), [middle-bottom](#), [right-bottom](#), [right-middle1](#), [right-middle2](#), [right-top](#), etc.

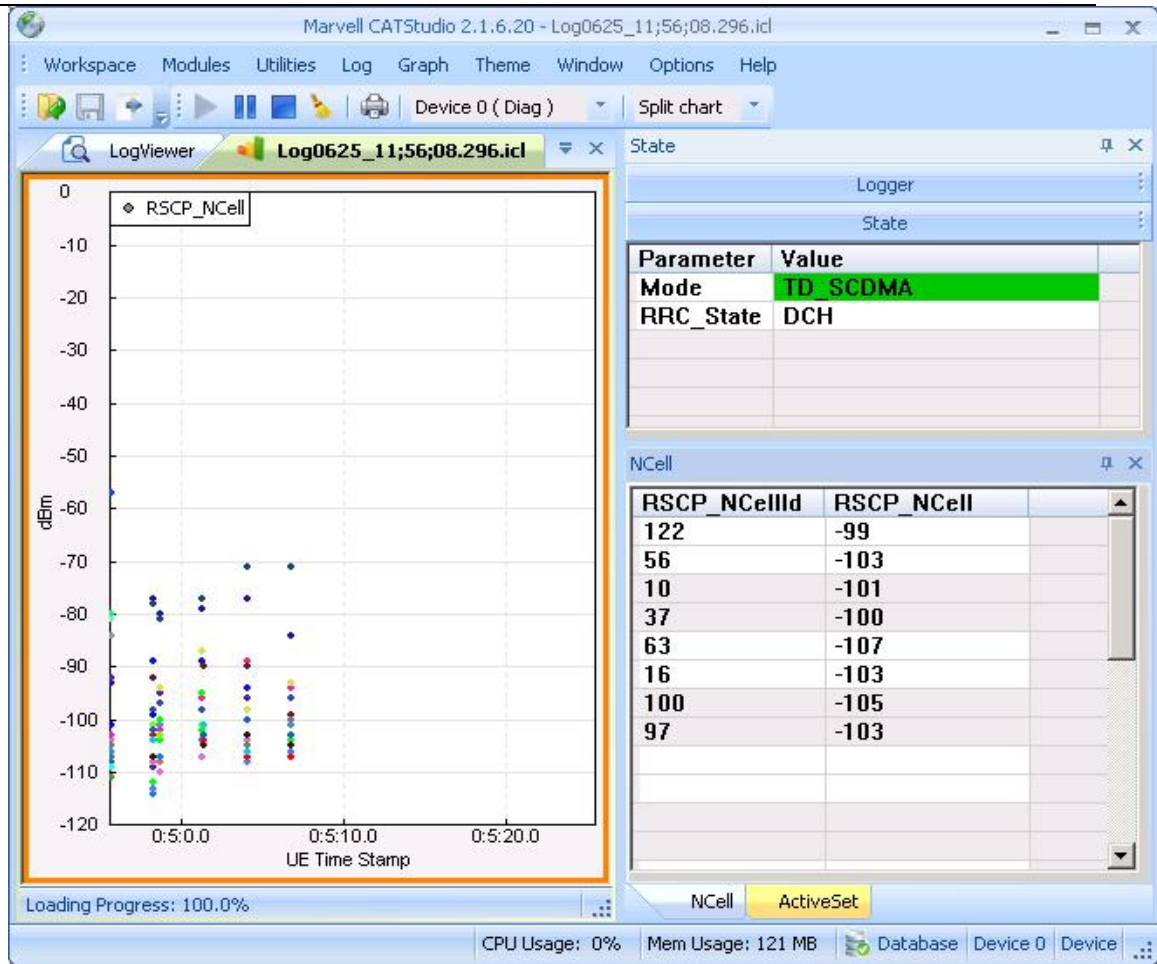

### Step6: 关于 Param type

Param type

☐ Single value

☒ Multiple value

1) 选择 Single value 显示如下图所示:

| State     |          |
|-----------|----------|
| Parameter | Value    |
| Mode      | TD_SCDMA |
| RRC_State | DCH      |
|           |          |
|           |          |
|           |          |

2) 选择 Multiple value 显示如下图所示:

Loading Progress: 100.0%

NCell

| RSCP_NCellId | RSCP_NCell |
|--------------|------------|
| 122          | -99        |
| 56           | -103       |
| 10           | -101       |
| 37           | -100       |
| 63           | -107       |
| 16           | -103       |
| 100          | -105       |
| 97           | -103       |

## 2 Appendix

### 2.1 Report issues

Please visit webs: <http://support.asrmicro.com>.

Or contact ASR FAE/AE

Or please send email to [lianghuxu@asrmicro.com](mailto:lianghuxu@asrmicro.com) with "PC Tools User Doc Issue/Update: ..." title

Or submit an issue at CQ web: <http://sh2-cq01.asrmicro.com/cqweb/login>.

### 2.2 Update this document

Please send updated document to [lianghuxu@asrmicro.com](mailto:lianghuxu@asrmicro.com) with "PC Tools User Doc Issue/Update: ..." title for merging, and you will receive merged latest version.

### 2.3 Revision History

| Rev  | Description     | Date       |
|------|-----------------|------------|
| 1.00 | Initial version | 2013-11-20 |
|      |                 |            |