



Mobile TD/TTC/LTE

PC Tools for TD/TTC/LTE

NvmEditor UserGuide

V1.0

Document Conventions



Note: Provides related information or information of special importance.



Caution

Caution: Indicates potential damage to hardware or software, or loss of data.



Warning: Indicates a risk of personal injury.

Document Status

Doc Status: UE ConSOLE User Guide

Technical Publication:

For more information, visit our website at: www.asrmicro.com

Disclaimer

No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose, without the express written permission of Asrmicro. ASR retains the right to make changes to this document at any time, without notice. ASR makes no warranty of any kind, expressed or implied, with regard to any information contained in this document, including, but not limited to, the implied warranties of merchantability or fitness for any particular purpose. Further, ASR does not warrant the accuracy or completeness of the information, text, graphics, or other items contained within this document. ASR products are not designed for use in life-support equipment or applications that would cause a life-threatening situation if any such products failed. Do not use ASR products in these types of equipment or applications.

Copyright © 2020. ASR International Ltd. All rights reserved..

Table of Contents

1	前言.....	4
1.1	NvMEDITOR 主要功能.....	4
2	使用用法.....	5
2.1	启动 NvMEDITOR.....	5
2.2	LOADING NVM FILES FROM PC WORKSTATION.....	5
2.3	BURN NVM FILES TO FLASH MEMORY.....	5
2.4	LOAD NVM FILES FROM FLASHMEMORY.....	6
2.5	SAVE NVM FILE TO PC WORKSTATION.....	7
3	APPENDIX.....	7
3.1	REPORT ISSUES.....	7
3.2	UPDATE THIS DOCUMENT.....	7
3.3	REVISION HISTORY.....	7

1 前言

1.1 NvmEditor 主要功能

NvmEditor为开发者提供便捷的方式编辑NVM Structure .

NvmEditor目前支持以下一些操作：

- 1) load NVM file from PC
- 2) Save NVM file to PC
- 3) Brun NVM file to Flash Memory

2 使用用法


2.1 启动 NvmEditor

在 CATStudio 窗口->Modules->NvmEditor.

2.2 Loading NVM Files from PC Workstation

1、启动 NvmEditor;

2、点击“Open PC file”按钮，选择 NVM 文件，打开文件，如下图所示：

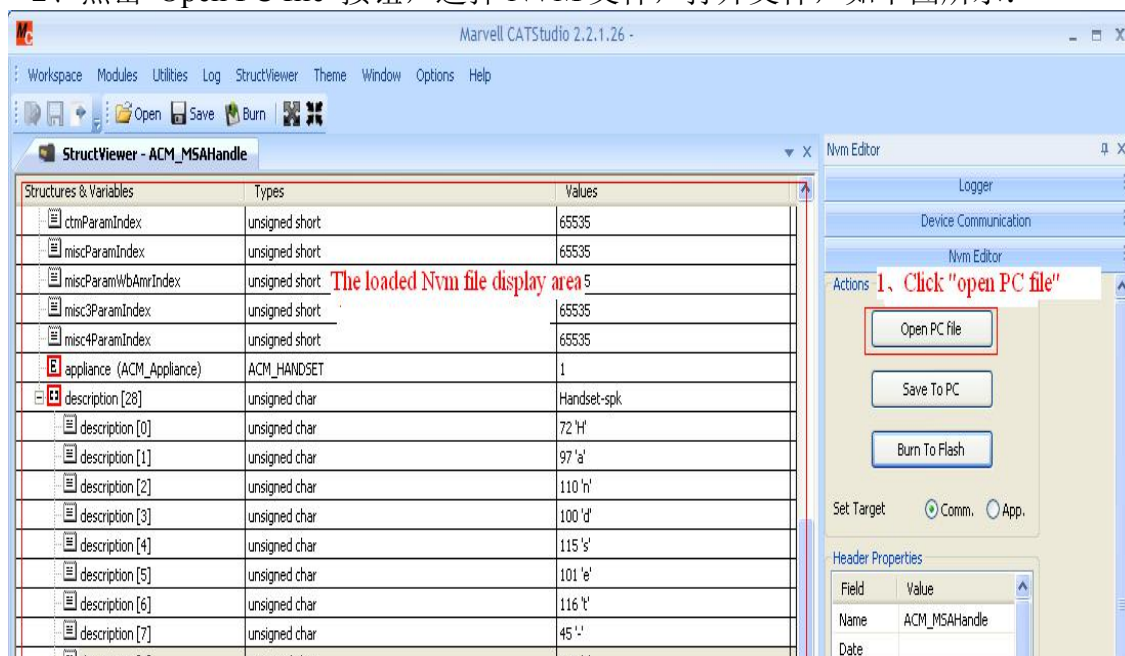

2.3 Burn NVM Files to Flash Memory

1、启动 NvmEditor;

2、点击“Open PC file”按钮,选择需要 Burn 的 NVM 文件。


3、选择 “Set Target” ->Comm or App

4、点击 “Burn To Flash” 按钮，.

5、将弹出 “Save to Flash” 对话框，点击 “OK”


6、文件将被 Burn to FlashMemory.

执行步骤可参照下图：

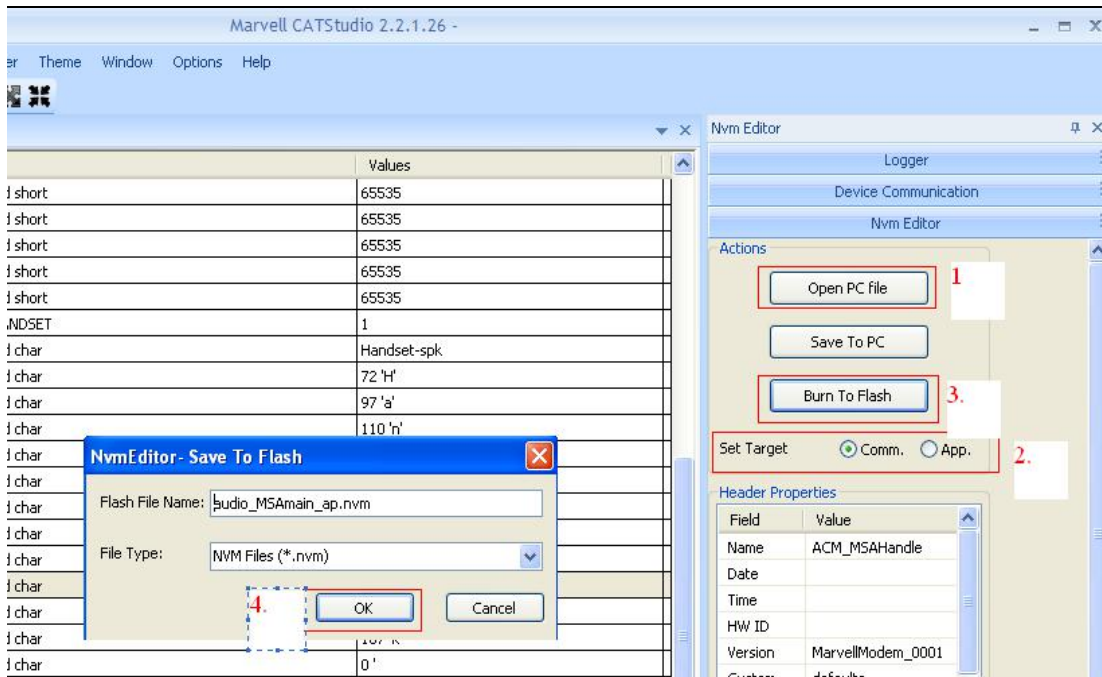

2.4 Load Nvm Files From FlashMemory

- 1、CATStudio 窗口，Modules->NvmEditor，启动 NvmEditor;
- 2、CATStudio 窗口，Modules->FlashExplorer,启动 FlashExplorer。
- 3、通过 FlashExplorer, load Nvm Files 并在 NvmEditor 中显示。

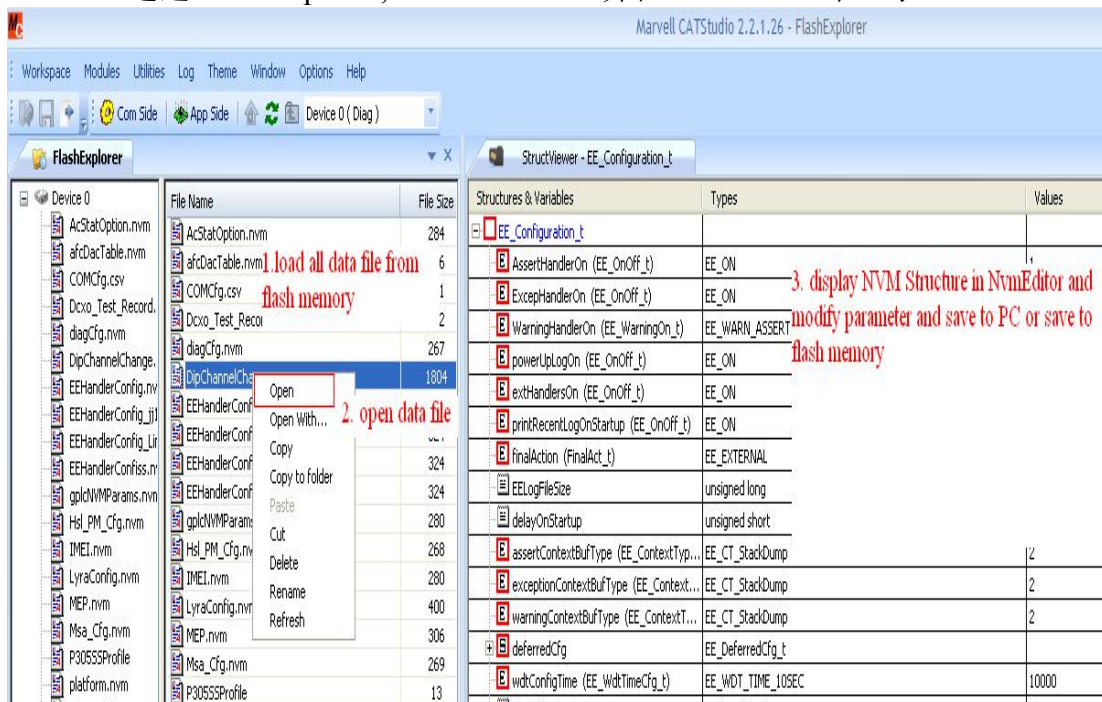

2.5 Save Nvm File to PC Workstation

- 1、Load NVM files (请参照 2.4 节)
- 2、点击“Save to PC”按钮;

3 Appendix

3.1 Report issues

Please visit webs: <http://support.asrmicro.com>.

Or contact ASR FAE/AE

Or please send email to lianghuxu@asrmicro.com with “PC Tools User Doc Issue/Update: ...” title

Or submit an issue at CQ web: <http://sh2-cq01.asrmicro.com/cqweb/login>.

3.2 Update this document

Please send updated document to lianghuxu@asrmicro.com with “PC Tools User Doc Issue/Update: ...” title for merging, and you will receive merged latest version.

3.3 Revision History

Rev	Description	Date
1.00	Initial version	2012-04-11
1.01	Commit to SVN.	2012-04-19