



Mobile TD/TTC/LTE

PC Tools for TD/TTC/LTE

UEFilter UserGuide

V1.0

Document Conventions

	Note: Provides related information or information of special importance.
 Caution	Caution: Indicates potential damage to hardware or software, or loss of data.
	Warning: Indicates a risk of personal injury.

Document Status

Doc Status: UE ConSole User Guide	Technical Publication:
-----------------------------------	------------------------

For more information, visit our website at: www.asrmicro.com

Disclaimer

No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose, without the express written permission of Asrmicro. ASR retains the right to make changes to this document at any time, without notice. ASR makes no warranty of any kind, expressed or implied, with regard to any information contained in this document, including, but not limited to, the implied warranties of merchantability or fitness for any particular purpose. Further, ASR does not warrant the accuracy or completeness of the information, text, graphics, or other items contained within this document. ASR products are not designed for use in life-support equipment or applications that would cause a life-threatening situation if any such products failed. Do not use ASR products in these types of equipment or applications.

Copyright © 2020. ASR International Ltd. All rights reserved..

Table of Contents

1	PERFACE.....	4
1.1	UeFILTER FUNCTION.....	4
2	USAGE.....	5
2.1	START UeFILTER.....	5
2.2	FILTERING DIAG MESSAGE.....	5
2.3	FILTERING GKI MESSAGE.....	6
3	APPENDIX.....	7
3.1	REPORT ISSUES.....	7
3.2	UPDATE THIS DOCUMENT.....	7
3.3	REVISION HISTORY.....	7

1 **Perface**

1.1 **UeFilter Function**


UeFilter enables you to download a filter to a target UE and decide which specific messages (DIAG, GKI, or DSP) are sent from the UE to the Catstudio workstation.

2 Usage

2.1 Start UFilter

Start UFilter, you can perform the following steps:

- 1、Select Modules->UEFilter from the top menu bar to activate UFilter.exe

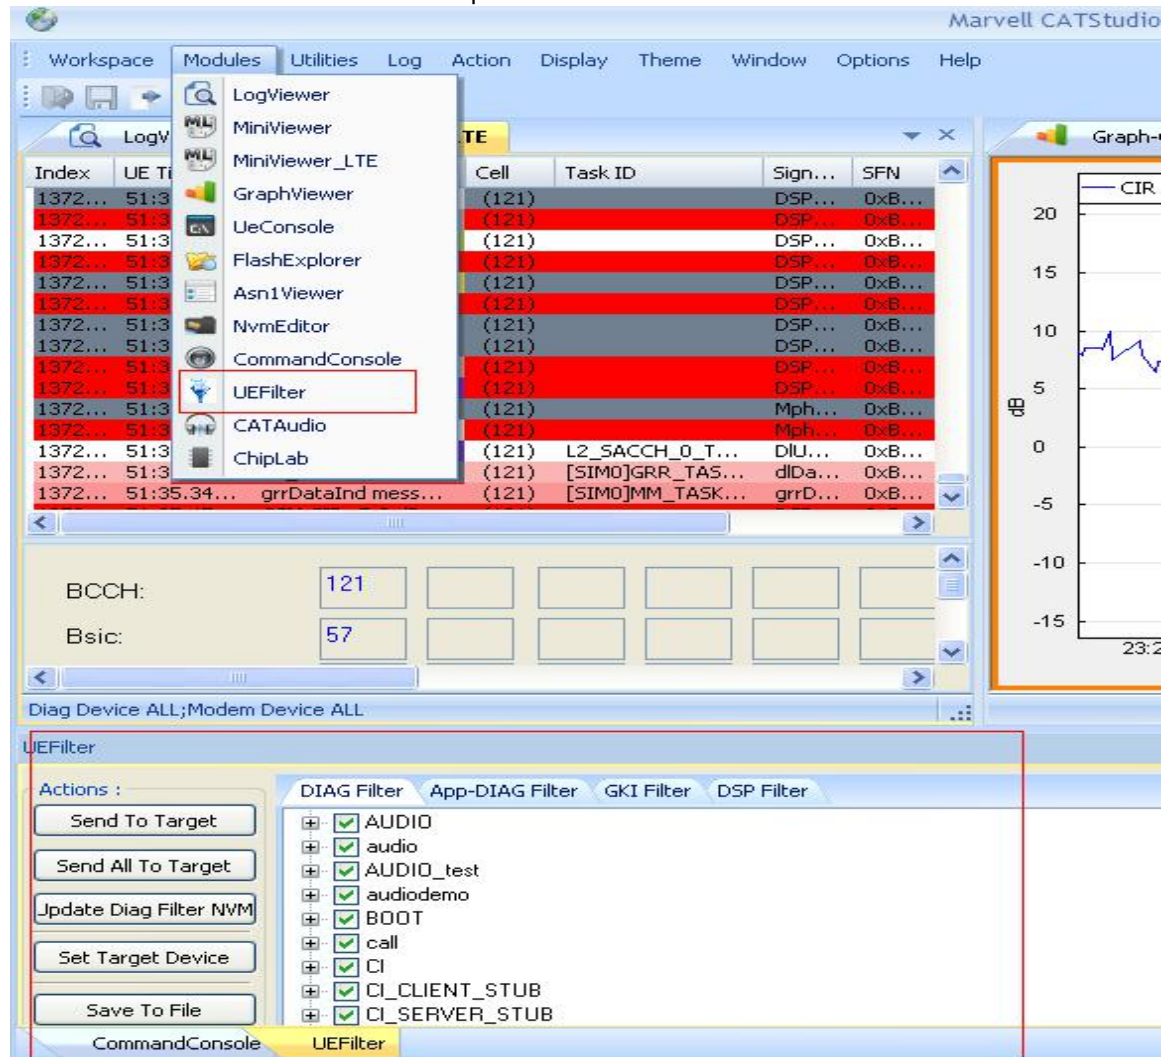

2.2 Filtering DIAG Message


Filtering DIAG Message, you can perform the following steps:

Step1: Select the tab labeled DIAG Filter from the UFilter.

Step2: Set filtering Diag Message, the method as follows:

- 1) Select option for those log need to be printed

2) No select option for those log need to be filtered.

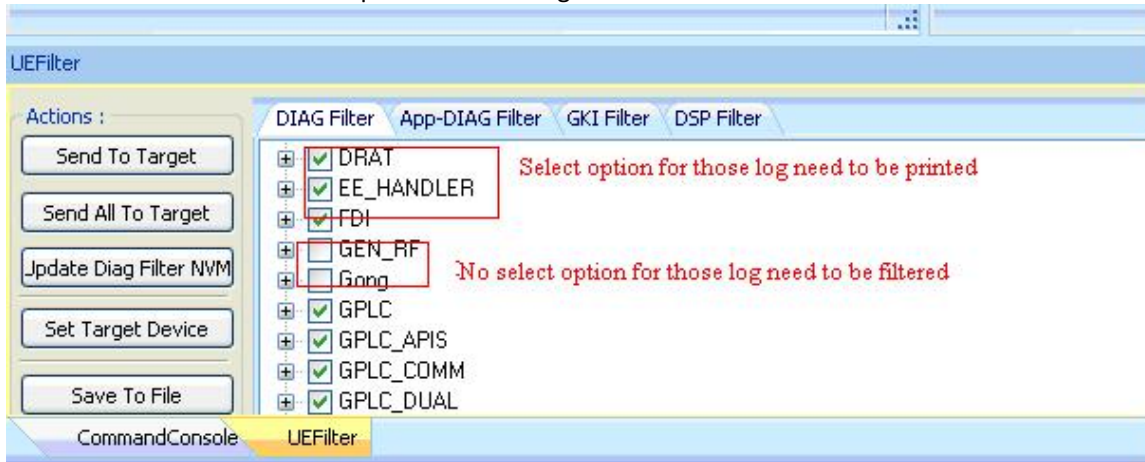

Step3: Click "Set Targe Device" button ;


Step4: Click "Send To Targe" button , Send fitler to UE;

2.3 Filtering GKI Message

Filtering GKI Message , you can perform the following steps:

Step1: Select the tab labeled GKI Filter from the UEFilter.

Step2: Set filtering Diag Message , the method as follows:

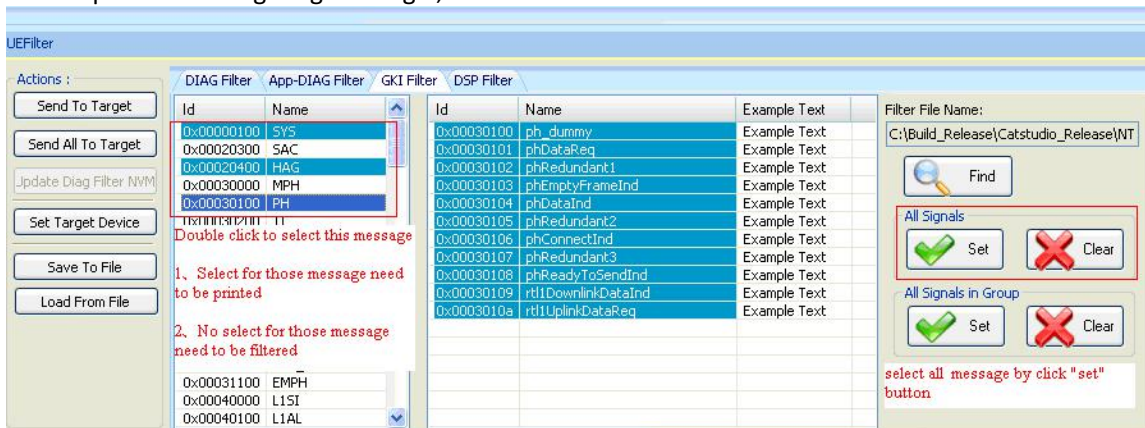

Step3: Click "Set Targe Device" button

Step4: Click "Send To Targe" button , Send fitler to UE;

3 Appendix

3.1 Report issues

Please visit webs: <http://support.asrmicro.com>.

Or contact ASR FAE/AE

Or please send email to lianghuxu@asrmicro.com with "PC Tools User Doc Issue/Update: ..." title

Or submit an issue at CQ web: <http://sh2-cq01.asrmicro.com/cqweb/login>.

3.2 Update this document

Please send updated document to lianghuxu@asrmicro.com with "PC Tools User Doc Issue/Update: ..." title for merging, and you will receive merged latest version.

3.3 Revision History

Rev	Description	Date
1.00	Initial version	2013-12-3