



Mobile TD/TTC/LTE

PC Tools for TD/TTC/LTE

UELogExporter UserGuide

V1.0

Document Conventions



Note: Provides related information or information of special importance.



Caution

Caution: Indicates potential damage to hardware or software, or loss of data.



Warning: Indicates a risk of personal injury.

Document Status

Doc Status: UE ConSole User Guide

Technical Publication:

For more information, visit our website at: www.asrmicro.com

Disclaimer

No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose, without the express written permission of Asrmicro. ASR retains the right to make changes to this document at any time, without notice. ASR makes no warranty of any kind, expressed or implied, with regard to any information contained in this document, including, but not limited to, the implied warranties of merchantability or fitness for any particular purpose. Further, ASR does not warrant the accuracy or completeness of the information, text, graphics, or other items contained within this document. ASR products are not designed for use in life-support equipment or applications that would cause a life-threatening situation if any such products failed. Do not use ASR products in these types of equipment or applications.

Copyright © 2020. ASR International Ltd. All rights reserved..

Table of Contents

1	前言.....	4
1.1	UELogEXPORTER 主要功能.....	4
2	使用用法.....	5
2.1	启动 UELogEXPORTER.....	5
2.2	UELogEXPORTER 使用.....	5
2.3	TXT 格式模板.....	5
3	APPENDIX.....	7
3.1	REPORT ISSUES.....	7
3.2	UPDATE THIS DOCUMENT.....	7
3.3	REVISION HISTORY.....	7

1 前言


1.1 UELogExporter 主要功能

UELogExporter.exe,是通过ADB从UE上取指定的文件到本地。


2 使用用法

2.1 启动 UELogExporter

- 1、启动 CATStudio.exe。
- 2、菜单 Modules-> UELogExporter,如下图所示。

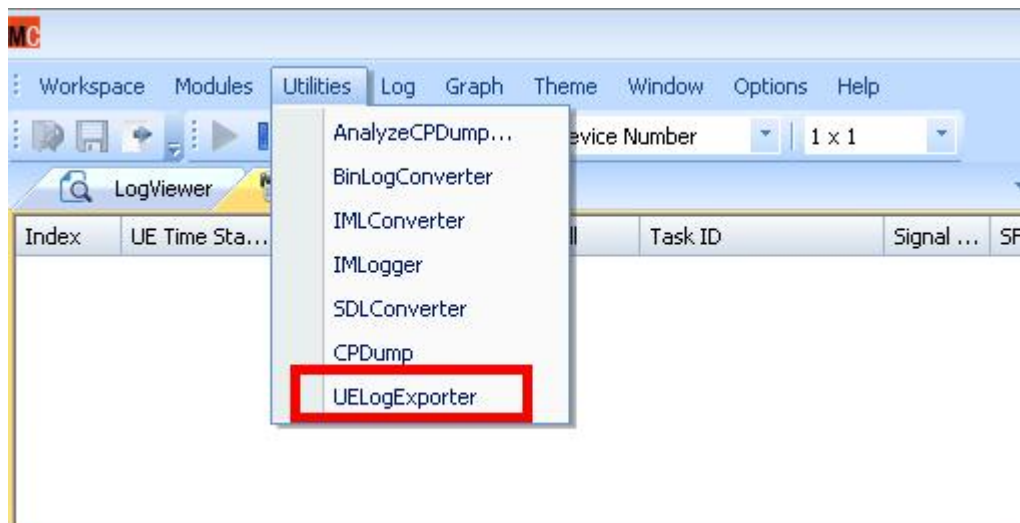

2.2 UELogExporter 使用

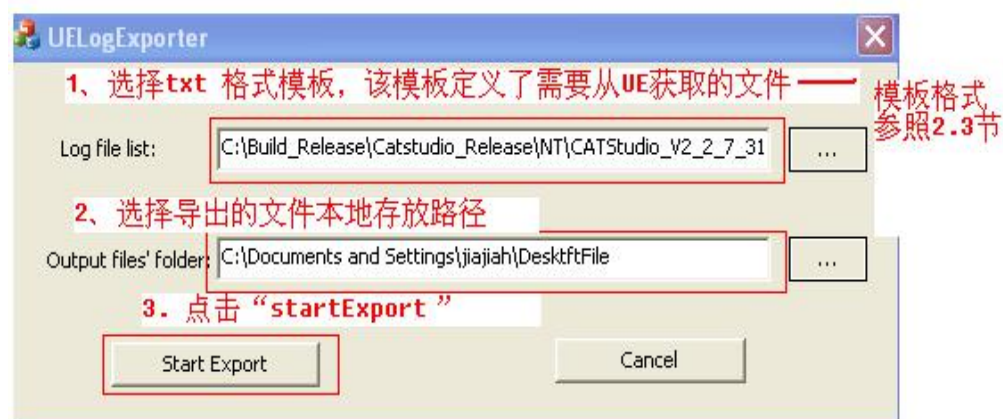

2.3 TXT 格式模板

- 1、模板存放路径: CATStudio\Exec\UELogExporter_FileList_Template.txt
- 2、模板格式说明:

0 10 20 30 40 50 60 70

```
[UELogExporter_FileList]  
Folder = /NVM/  
remote0 = platform.nvm  
remote1 = AcStatOption.nvm  
remote2 = mds/AP_MDB.zip
```

1. UE中的文件夹（文件所存在的）

NVM文件夹下需要获取的文件名称

NVM文件夹下子文件夹文件格式

3 Appendix

3.1 *Report issues*

Please visit webs: <http://support.asrmicro.com>.

Or contact ASR FAE/AE

Or please send email to lianghuxu@asrmicro.com with "PC Tools User Doc Issue/Update: ..." title

Or submit an issue at CQ web: <http://sh2-cq01.asrmicro.com/cqweb/login>.

3.2 *Update this document*

Please send updated document to lianghuxu@asrmicro.com with "PC Tools User Doc Issue/Update: ..." title for merging, and you will receive merged latest version.

3.3 *Revision History*

Rev	Description	Date
1.00	Initial version	2012-04-11
1.01	Commit to SVN.	2012-04-19