



Mobile TD/TTC/LTE

PC Tools for TD/TTC/LTE

SDLConvertExe UserGuide

V1.0

Document Conventions



Note: Provides related information or information of special importance.



Caution

Caution: Indicates potential damage to hardware or software, or loss of data.



Warning: Indicates a risk of personal injury.

Document Status

Doc Status: UE ConSole User Guide

Technical Publication:

For more information, visit our website at: www.asrmicro.com

Disclaimer

No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose, without the express written permission of Asrmicro. ASR retains the right to make changes to this document at any time, without notice. ASR makes no warranty of any kind, expressed or implied, with regard to any information contained in this document, including, but not limited to, the implied warranties of merchantability or fitness for any particular purpose. Further, ASR does not warrant the accuracy or completeness of the information, text, graphics, or other items contained within this document. ASR products are not designed for use in life-support equipment or applications that would cause a life-threatening situation if any such products failed. Do not use ASR products in these types of equipment or applications.

Copyright © 2020. ASR International Ltd. All rights reserved..

Table of Contents

1	使用用法.....	4
1.1	运行程序.....	4
1.1.1	SDLConverter UI 模式.....	4
1.1.2	SDLConvert BAT 模式.....	4
2	APPENDIX.....	6
2.1	REPORT ISSUES.....	6
2.2	UPDATE THIS DOCUMENT.....	6
2.3	REVISION HISTORY.....	6

1 使用用法


1.1 运行程序

SDLConvert 程序支持两种启动模式：

- 1、双击 SDLConverter.exe 启动 UI 界面
- 2、通过 BAT 命令行方式执行

1.1.1 SDLConverter UI 模式

双击 SDLConverter.exe 启动程序，如下图所示：

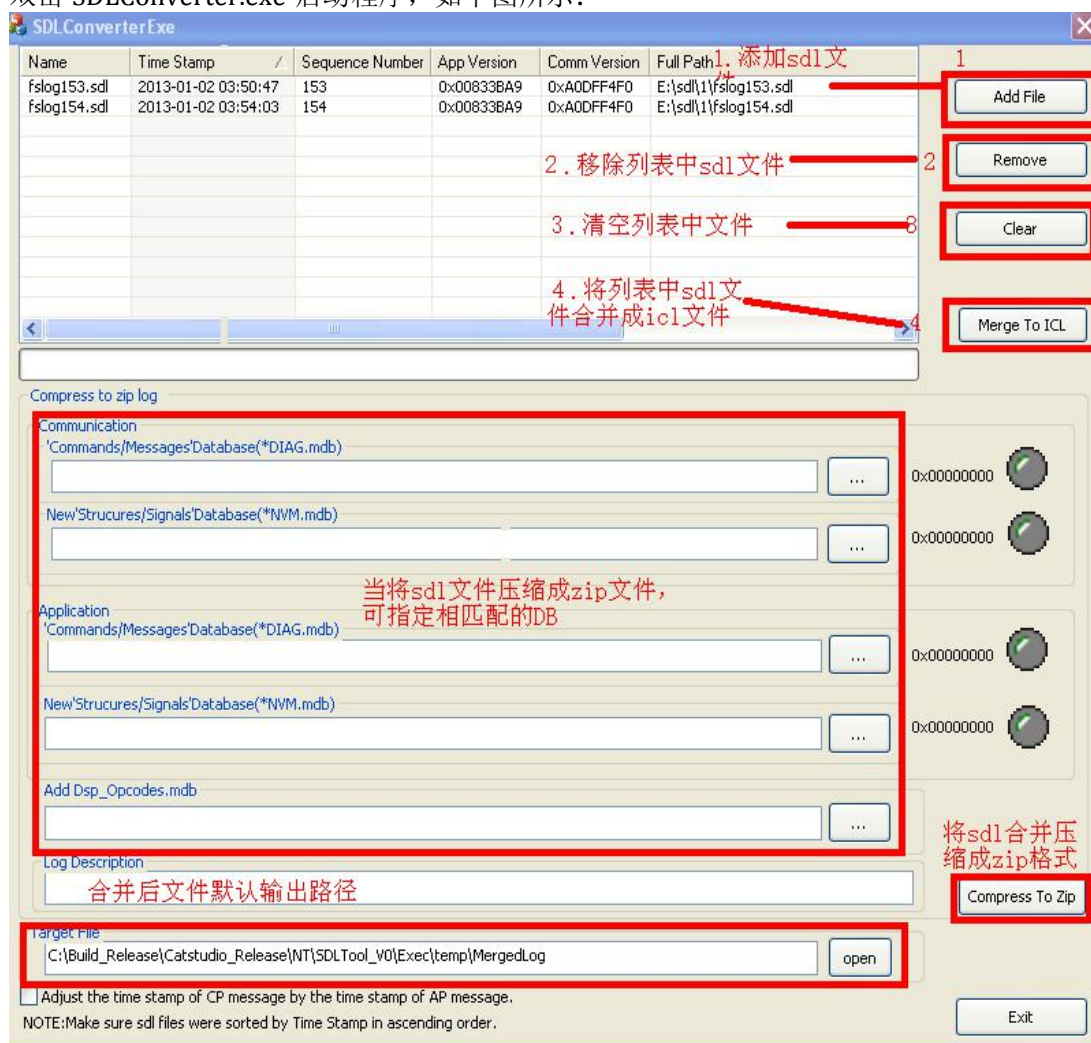

1.1.2 SDLConvert BAT 模式

SDLConverter 支持命令行方式，将 sdl 文件压转换成 ziplog 格式。

1、命令行参数解读：

参数名称	含义
%~0	取 bat 当前路径
-f	sdl 文件路径
-C_D_db	CP Diag DB 路径
-C_N_db	CP NVM DB 路径
-A_D_db	AP Diag DB 路径
-A_N_db	AP NVM DB 路径
-dspdb	DSP DB 路径
-o	Sdl 合并成 ziplog 存放路径

2、举例

将“E:\sdl\1”和“E:\sdl\2”路径下面的sdl文件分别合并成ziplog。DB存放路径：“E:\sdl\DB”，生成Ziplog存放路径：“E:\res”


操作步骤：

Step1:编辑 SDLConverter_CMD.bat，修改好参数如下所示：

```
SDLConverter.exe %~0 -f "E:\sdl\1" -f "E:\sdl\2"
-C_D_db "E:\sdl\DB\ UE_Commands.mdb"
-C_N_db "E:\ sdl \ DB \ NVM.mdb "
-A_D_db "E:\ sdl \ DB \ App_UE_Commands.mdb "
-A_N_db "E:\ sdl \ DB \ App_NVM.mdb "
-dspdb " E:\ sdl \ DB \ DSP_Opcodes.mdb "
-o "E:\res"
```

Step2:双击 SDLConverter_CMD.bat，执行合并，cmd 窗口消失后完成合并。

Step3:合并后结果，如下图所示：**Zip 命名规则：时间+sdl 目录名**

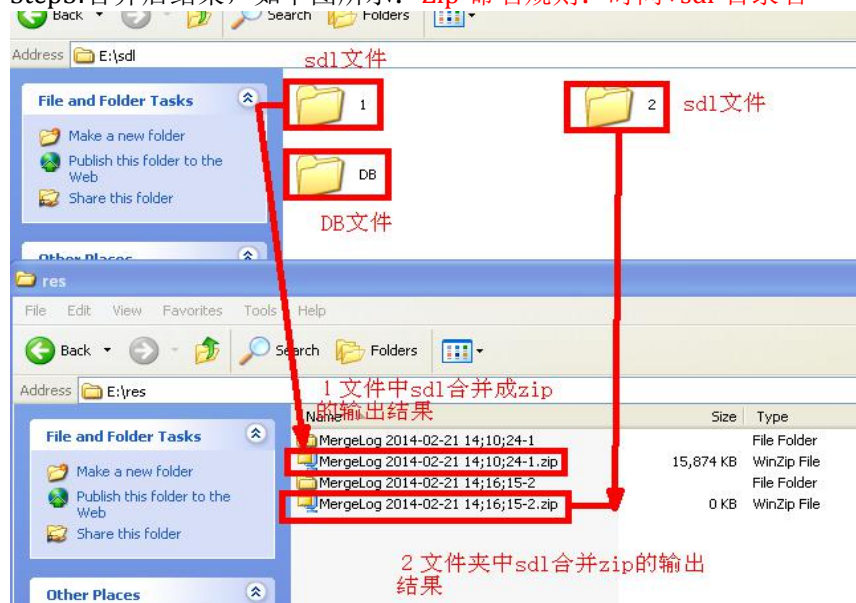

2 Appendix

2.1 Report issues

Please visit webs: <http://support.asrmicro.com>.

Or contact ASR FAE/AE

Or please send email to lianghuxu@asrmicro.com with “PC Tools User Doc Issue/Update: ...” title

Or submit an issue at CQ web: <http://sh2-cq01.asrmicro.com/cqweb/login>.

2.2 Update this document

Please send updated document to lianghuxu@asrmicro.com with “PC Tools User Doc Issue/Update: ...” title for merging, and you will receive merged latest version.

2.3 Revision History

Rev	Description	Date
1.00	Initial version	2013-8-28