



Mobile TD/TTC/LTE

PC Tools for TD/TTC/LTE

Miniviewer Message Filter UserGuide

V1.0

Document Conventions



Note: Provides related information or information of special importance.



Caution

Caution: Indicates potential damage to hardware or software, or loss of data.



Warning: Indicates a risk of personal injury.

Document Status

Doc Status: UE ConSole User Guide

Technical Publication:

For more information, visit our website at: www.asrmicro.com

Disclaimer

No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose, without the express written permission of Asrmicro. ASR retains the right to make changes to this document at any time, without notice. ASR makes no warranty of any kind, expressed or implied, with regard to any information contained in this document, including, but not limited to, the implied warranties of merchantability or fitness for any particular purpose. Further, ASR does not warrant the accuracy or completeness of the information, text, graphics, or other items contained within this document. ASR products are not designed for use in life-support equipment or applications that would cause a life-threatening situation if any such products failed. Do not use ASR products in these types of equipment or applications.

Copyright © 2020. ASR International Ltd. All rights reserved..

Table of Contents


1	使用用法.....	4
1.1	SETTING MESSAGE FILTER.....	4
1.2	导出/导入 FILTER 文件.....	4
1.2.1	导出 <i>filter</i> 文件.....	4
1.2.2	导入 <i>filter</i> 文件.....	5
2	APPENDIX.....	5
2.1	REPORT ISSUES.....	5
2.2	UPDATE THIS DOCUMENT.....	6
2.3	REVISION HISTORY.....	6

1

使用用法

1.1 Setting Message Filter

- 1、在 miniviewer 窗口，点击 action->Edit setting;
- 2、设置需要过滤的消息，如下图所示：

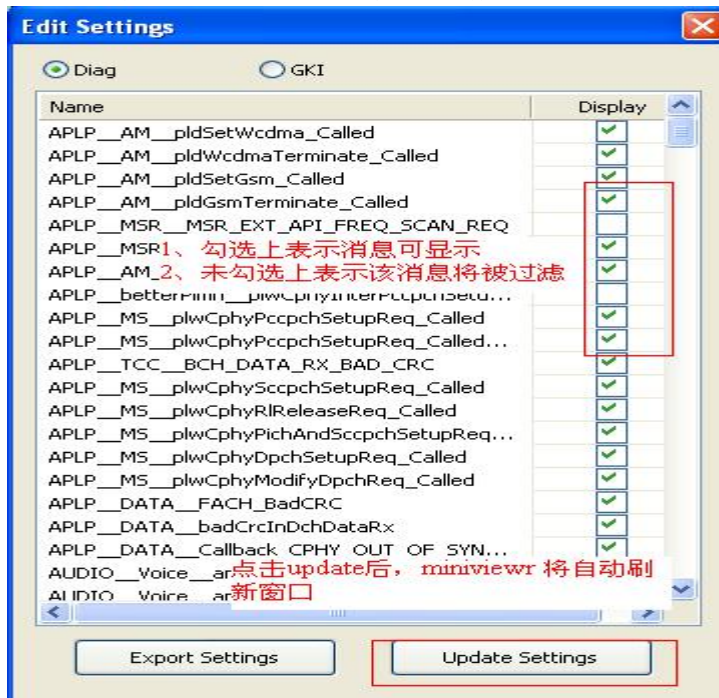


- 3、设置完成后，点击“update setting”按钮后，miniviewer 将自动刷新窗口。

1.2 导出/导入 filter 文件

当 catstudio 版本升级后，可以将旧版本设置的 filter 文件保存，导入新版本 catstudio 中使用。


1.2.1 导出 filter 文件

- 1、在 miniviewer 窗口，点击 action->Edit setting;
- 2、导出文件，如下图所示：

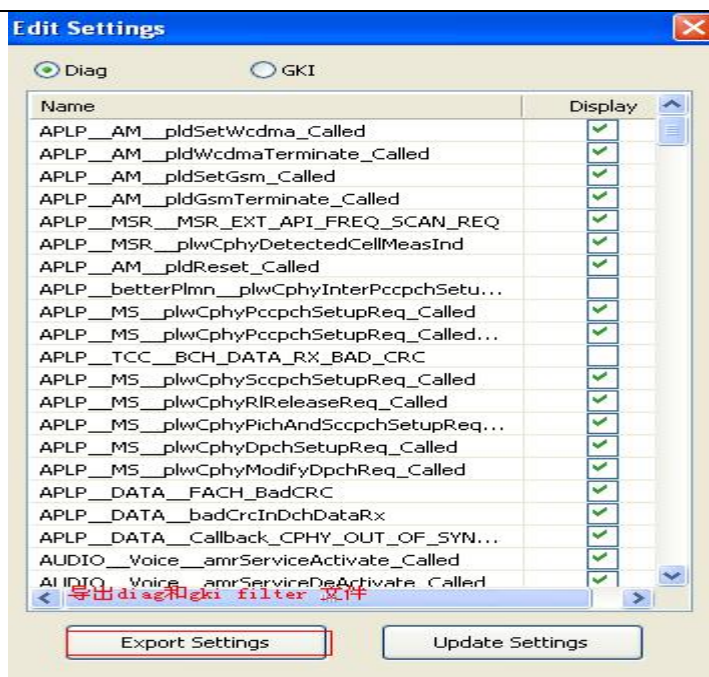

1.2.2 导入 filter 文件

- 1、在 miniviewer 窗口，点击 Action->Update All CSV Setting;
- 2、更新文件,如下图所示:

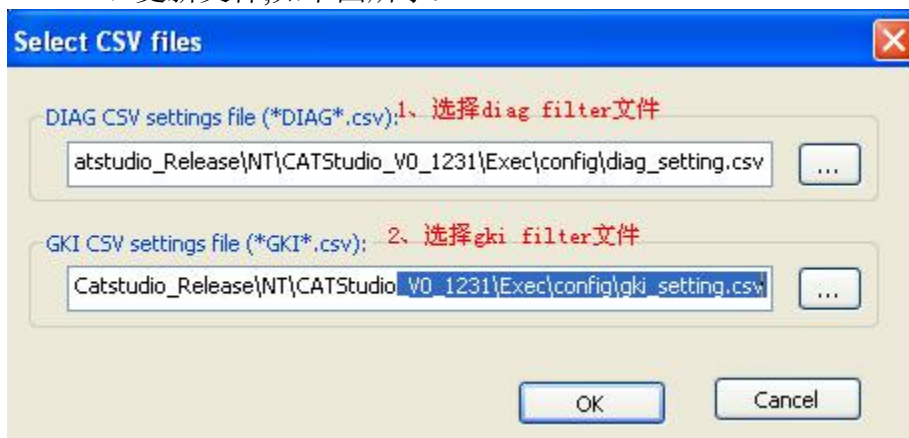

2 Appendix

2.1 Report issues

Please visit webs: <http://support.asrmicro.com>.

Or contact ASR FAE/AE

Or please send email to lianghuxu@asrmicro.com with "PC Tools User Doc Issue/Update: ..." title

Or submit an issue at CQ web: <http://sh2-cq01.asrmicro.com/cqweb/login>.

2.2 Update this document

Please send updated document to lianghuxu@asrmicro.com with "PC Tools User Doc Issue/Update: ..." title for merging, and you will receive merged latest version.

2.3 Revision History

Rev	Description	Date
1.00	Initial version	2013-8-28